

AI face cloud platform device settings

Cloud URL: <https://global.yunatt.com/>

Device Settings :

- 1、 Access <MENU> ---<Comm set>---<Ethernet>---<DHCP> change to 'Yes'
- 2、 Access <MENU> ---<Comm set>-- <Server >

Server Req	Select 'Yes'
Use domainNm	Select 'Yes' or 'No'
DomainNm	If you select 'Yes' for 'Use domain Nm', enter the server domain name here,server domain name is global.yunatt.com
Server IP	If you select 'YES' for 'Use domain Nm', ignore the setting of server ip
SerPortNo	Enter server port number,port number is 7792
Heartbeat	Default value is 3s
Server approval	Select 'No'

< BACK Server

Server Req	Yes
Use domainNm	Yes
DomainNm	global.yunatt.com
Server IP	008.219.014.147
SerPortNo	7792
Heartbeat	3
Server approval	No


Cloud Settings :

- 1、 check device serial number in device <menu>--<Sys info>--<info>



Capacity	Info
Device ID	1
IP address	192.168.001.224
SN	AI05205
Released	26 Feb 2021
Firmware	ai806_f50h_v3.36
Engine	AIFace_v3.20


- 2、 Add device in cloud--<System Settings>--<Device Management>, input same serial number and device type should be 'AI Dynamic Face Attendance Machine'

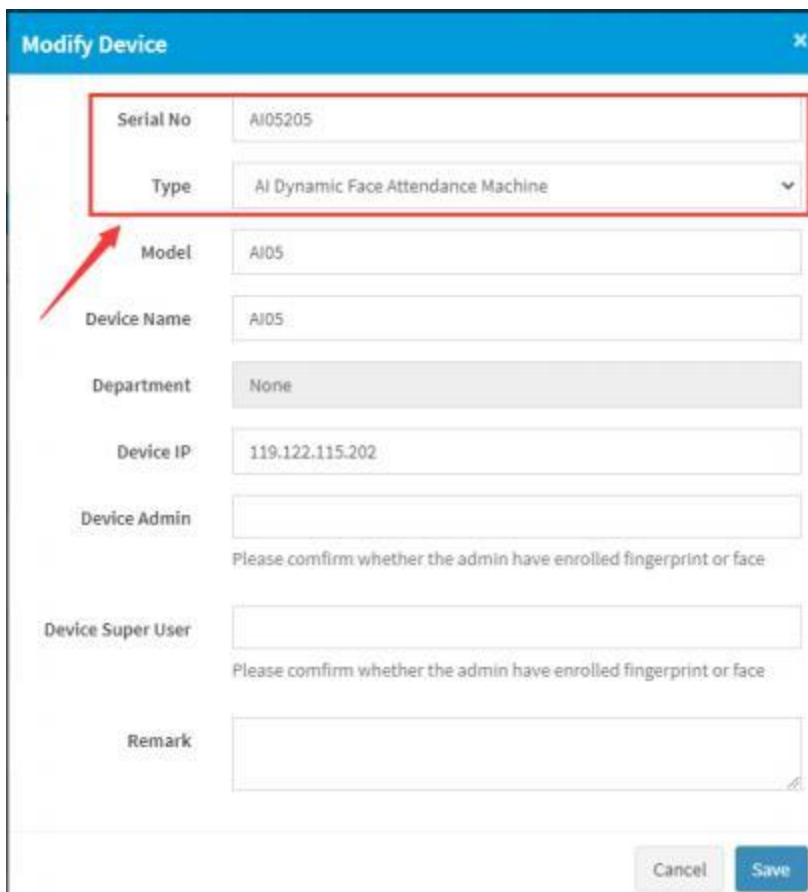

Modify Device

Serial No	AI05205
Type	AI Dynamic Face Attendance Machine
Model	AI05
Device Name	AI05
Department	None
Device IP	119.122.115.202
Device Admin	
Please confirm whether the admin have enrolled fingerprint or face	
Device Super User	
Please confirm whether the admin have enrolled fingerprint or face	
Remark	

Cancel Save

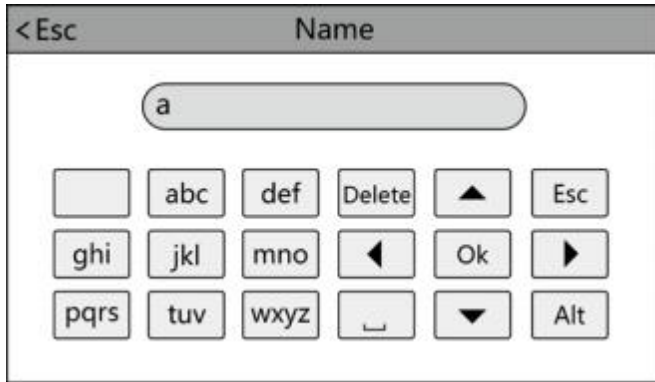

Touch 'Alt' to switch capital/small letter or number, after finished,touch 'Ok' to save it
How to input punctuation:when the input method is in capital/small letter state,touch '☐' to select what you want to input. The first one is space, the second is dot and so on